



# Quick Start Guide

**Thank You for your purchase! You're one step closer to *securely* getting your data.**

## Connecting Your Devices to Databases

This quick start guide is your 1-2-3-RUN instructions to connect your devices (e.g. PLCs) to databases (e.g. SQL) in minutes.

Log-on to [www.IIoTA.net](http://www.IIoTA.net) for video tutorials and in-depth manual.

## 1. Power

Unpack your IIoTA™ MiNi. Install on DIN rail, and connect 24 Vdc.

## 2. Install

Before interfacing your IIoTA™ MiNi, the Workbench setup software must be installed on a local PC. This software may be downloaded online by navigating to:

<https://www.IIoTA.net/resources>

Download the Workbench software. Navigate to the installation file location and double-click the executable file to begin the installation.

## 3. Connect

Ensure the IIoTA™ MiNi is connected via standard Ethernet (RJ45) cable connections (not included). The unit is equipped with two (2) RJ45 network ports labeled ETH0 and ETH1. The unit comes pre-configured with the following addresses:

ETH0: 192.168.1.68


ETH1: 10.10.10.10

# 3. Connect continued

To connect to the unit, first reference the Network Connections area in Windows and perform the steps below. A step-by-step “How To Connect” tutorial can be viewed on [www.IIoTA.net/tutorials](http://www.IIoTA.net/tutorials).

- Right click the appropriate LAN connection, and select ‘Properties’.
- Highlight ‘Internet Protocol Version 4 (TCP/IPv4)’
- Select ‘Properties’
- Select ‘Use the Following IP Address:’
- If connected to ETH0, the PC address should be set to 192.168.1.nnn, where ‘nnn’ is a unique number between 2 and 255. ETH1 will be set in similar fashion. Note that the PC address should not match that of the IIoTA™ port.
- Set the Subnet mask to 255.255.255.0

## Run!

Open the Workbench software, right click ‘Nodes’, select a ‘Network’, and ‘Scan’ for the IIoTA™ MiNi unit. Once located, the IIoTA™ icon  will be displayed on the left-hand tree view of the Workbench software.

---

## Resetting IP Addresses to Default

Resetting the IIoTA™ MiNi unit allows the user to return the IP address assignments to the factory settings without compromising existing programs and settings.

Follow these instructions.

1. Power OFF the IIoTA™ MiNi
2. Switch to the RESET position
3. Power ON the IIoTA™ MiNi
4. After 25 seconds, move the switch back to NORMAL
5. The IP addresses will be reset to:


ETH0: 192.168.1.68 / 255.255.255.0  
ETH1: 10.10.10.10 / 255.255.255.0



---

## Specifications:

Power:	24 Volt @ 0.25A
Network Security:	Integrated Hardened Gateway
Temperature:	0°C to +70°C
Dimensions (mm):	2.125" x 5.98" x 4.09" (54 x 152 x 104)
Enclosure:	Metal DIN-Style Enclosure

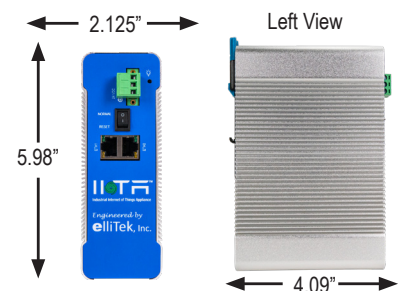

---

Technical Support: +1 (865) 409-1555 or [support@elliTek.com](mailto:support@elliTek.com)

Don't forget to register your new IIoTA™ MiNi by filling out the enclosed form or complete the form online at [www.IIoTA.net/resources](http://www.IIoTA.net/resources), scroll down to *Product Registration*.